

INFLATABLE BOAT CLEANER™

USE ON HYPALON, PVC, RUBBER, FIBERGLASS,
STAINLESS STEEL, ALUMINUM & CHROME.



Removes dirt, grime, oil, deisel soot, bird droppings, insect marks, chalk and most stains from inflatable boats.

DIRECTIONS:

Spray onto surface to be cleaned. Wait for a few minutes for INFLATABLE BOAT CLEANER™ to penetrate. Use a Scrub brush or sponge and clean area until all dirt, grime and stains are gone. Rinse well. When surface is dry, protect with POLY GUARD™.

DO NOT FREEZE

CAUTION:

Do not get in eyes. Do not get on skin. Keep out of reach of children.

FIRST AID TREATMENT:

If swallowed Give 2 glasses of water for dilution; Do not induce vomiting, seek medical attention. If in eyes, rinse well with water. If on skin, rinse well with water.