

MAXI CLEAN™

Inflatable Pillow Cleaner

Indikon MAXI CLEAN™ Inflatable Pillow

Cleaner Removes: Scuffmarks, Grime, Oil, Soot,

Bird Droppings, Insect Marks, Pollution and most

Stains from inflatable pillows used for bouncing and jumping.



DIRECTIONS:

For best results, the cleaning and protection process should be performed late in the afternoon or early morning, out of direct sunlight. Inflate the pillow. Clean one panel at a time. Hose down the section and spray MAXI CLEAN™ Inflatable Pillow Cleaner onto the panel. Use a medium bristled brush and scrub in a circular motion, keeping the section wet. After two minutes, repeat the scrubbing. Spray more MAXI CLEAN™ Inflatable Pillow Cleaner if required to maintain a wet lather. Hose clean. Spray more MAXI CLEAN™ Inflatable Pillow Cleaner onto the panel and scrub a second time if needed. Hose clean, making sure that all residue is rinsed off. Wipe the panel dry with a chamois or soft cloth. Continue cleaning the rest of the inflatable pillow, one panel at a time until the complete inflatable pillow is clean and dry.

AFTER CLEANING:

Before using your Inflatable Pillow, It is essential that the surface is protected against UV, pollution and dirt damage with Indikon POLY GUARD™ Inflatable Pillow UV Protector.

SHAKE WELL BEFORE USING

HANDLING & STORAGE:

Store in a cool, dry, ventilated area. Avoid skin & eye contact. Do not Freeze.

CAUTION:

In case of eye contact rinse immediately with plenty of water. In case of skin contact, wash with soap & water. If ingested, seek medical advice. Do not induce vomiting. In all cases of doubt or when symptoms persist, seek medical attention.